


## New Holland T8 Front Support - T4A & B w/ STD PST & CVT - TerraGlide Series

**Undercarriage Installation Instructions** 

## Caution:

- Always use precaution when working around any equipment.
- Always wear safety glasses.
- Follow tractor manufacturer's safety guidelines when installing this product.
  - 1. Read all instructions prior to installation.
  - 2. Install 2 1" x 6" bolts (PN: 16-17271) and 2 1" nuts (PN: 70-20599) on the end of the front support. Turn the 1" bolts in for installation. The bolts will be adjusted after the push pole is installed. See the attached diagram for proper installation of the bolts and nuts.
  - 3. If the tractor has the saddle axle, go to Step #5.
  - 4. If the tractor has the scissor axle, remove the accumulator bracket that hangs down right behind the lift arms on the front 3-point and attach the new supplied brackets in it's place and reattach the accumulator to the new bracket. Attach the left and right brackets together with a 3/8" flange bolt (PN: 16-35C616) and nut (PN: 70-20622).
  - 5. Position the front support under the tractor and center with the frame of the tractor.
  - 6. Support the front linkage frame and remove the 2 pivot pins that hold the lift arms to the frame.
  - 7. Lift the front of the front support. Once the ears are aligned with the frame and the lift arms of the front 3-point, insert the front push pole pins (PN: 43-18015) on each side.
  - **8.** Once the pins are in place, insert a spacer (PN: 19-13515) in the open space between the legs of each pin head. Insert a 3/4" bolt (PN: 16-20216) with a 3/4" flat washer (PN: 57-20747) through the spacer and the hole of the push pole. See attached diagram for clarification.
  - **9.** Modifications are needed to reattach the pads on the side of the tractor frame where the side rails are attached. Refer to the attached diagram for further information.
- **10.** Use 10 20mm x 70mm bolts (PN: 16-1876) with a 3/4" flat washer (PN: 57-20747) on each bolt in the holes of the left and right rail (PN: 44-14980-R,L) to attach the rails to the tractor frame.
- **11.** If there is a ground boss where the rails are attached to the tractor, use the 20mm x 120mm bolt (PN: 16-2489) with a 3/4" washer (PN: 57-20747) along with the ground boss instead of a 20mm x 70mm bolt.
- 12. Attach the left and right rails to the rear of the undercarriage with 2 1" bolts (PN: 16-20560), 4 1" heavy duty flat washers (PN: 57-20819), and 2 1" nuts (PN: 70-20599) for each side.
- 13. Once all bolts are installed, torque the front 3/4" bolts to 257 ft-lbs., the 20mm bolts on the side rails to 432 ft-lbs., and the 1" bolts attaching the side rails to the U/C to 903 ft-lbs.
- **14.** Position the push pole (PN: 17-14930) under the tractor. See the attached diagram for the correct orientation of the push pole.
- 15. Slide the push pole onto the rod at the rear of the undercarriage. Lift the rear of the push pole up to the drawbar bracket.
- **16.** Screw in a 1" x 3" bolt (PN: 16-20562) on each side of the push pole all the way till they are tight and are resting on the top of the drawbar bracket.
- **17.** Push the push pole back tight against the drawbar bracket.
- **18.** Unscrew the two 1"x6" bolts at the front of the push pole until they are tight against the push pole. Torque the 1" bolts to 90-95 ft-lbs.
- **19.** Tighten the nuts up tight against the push pole. Use the nuts to lock the bolts in place.
- 20. After first 8 hours of use, re-torque all bolts.
- **21.** Check all fasteners regularly to ensure proper operation of equipment.

PN: 63-18020-INS

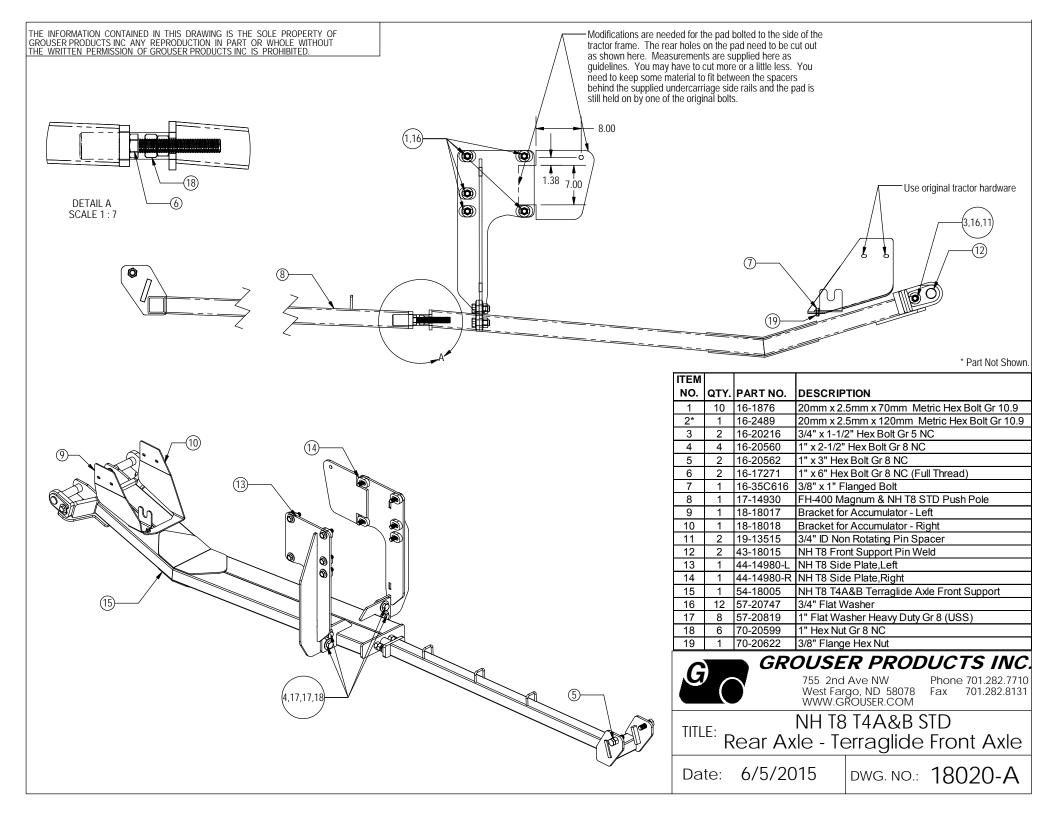




## Torque Arm - Front Hitch Installation Instructions

## Caution:

- Always use precaution when working around any equipment.
- Always wear safety glasses.
- Follow tractor manufacturer's safety guidelines when installing this product.
- Read all instructions prior to installation.
  - 1. Set the front hitch arms to the fixed position. The front hitch arms cannot be in float with the torque arm installed.

**!!!The front hitch arms** <u>cannot</u> be in float with the torque arm installed**!!!** Refer to tractor manufacturer's operator's manual for front hitch arms fixed positition pin location.


- 2. Position the torque arm between the front hitch arms. The longest edge of the plate should be closest to the tractor and the angled edge on the bottom. See the photo below for correct orientation.
- 3. Support the torque arm and install a bolting plate with 4 3/4" x 3-1/2" bolts and 4 3/4" nuts on each side.
- 4. Once the bolts are all installed, push the torque arm evenly towards the tractor. Keep the torque arm parallel to the front of the tractor.
- 5. Torque the 3/4" bolts to 100 ft-lbs.
- 6. After first 8 hours of use, re-torque all bolts.
- 7. Check all fasteners regularly to ensure proper operation of equipment.

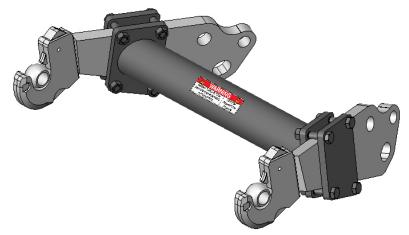


Note: The style of front hitch arms may vary slightly.




INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF USER PRODUCTS INC ANY REPRODUCTION IN PART OR WHOLE WITHOUT WRITTEN PERMISSION OF GROUSER PRODUCTS INC IS PROHIBITED.	ITEM NO.	QTY.	PART NO.	DESCRIPTION
	1	1	11-19719	Torque Arm
	2	8	16-20224	3/4" x 3-1/2" Gr.5 Hex Bolt NC
	3	1	27-40405	Warning Decal - Torque Arm
	4	2	44-19716	Plate
	5	8	70-20607	3/4" Center Lock Hex Nut NC

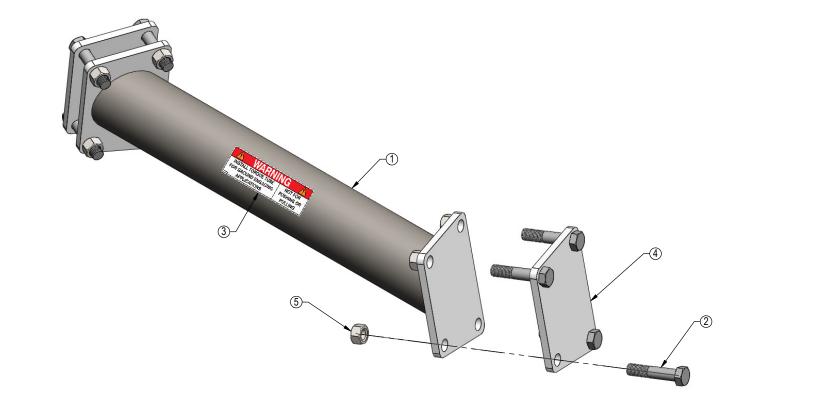

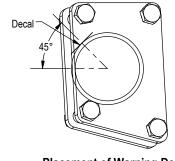

Placement of Warning Decal

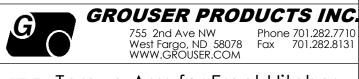

TITLE: Torque Arm for Front Hitches

dwg. no.: **19719-A** 

Date: 2-16-2017