

FH-400 NH 70, 70A Series (Frame Mount)

Undercarriage Installation Instructions

Caution:

- Always use precaution when working around any equipment.
- Always wear safety glasses.
- Follow tractor manufacturer's safety guidelines when installing this product.
 - 1. Read all instructions prior to installation.
 - 2. Remove weights and weight bracket from front of tractor.
 - **3.** Use long 1" bolts in the axle where the weight bracket bolts were removed. Use the original washers and nuts. Torque the 1" bolts to the tractor manufacturer's specifications.
 - **4.** Position the undercarriage (U/C) in front of axle and center with the frame of the tractor.
 - **5.** Loosely attach the left and right rails (PN: 44-3347-R,L) to the U/C with 3 1" x 2" bolts (PN: 16-20558), 6 1" heavy flat washers (PN: 57-20819), and 3 1" nuts (PN: 70-20599) on each side.
 - 6. Lift the U/C until the front holes on the tractor line up with the front holes on the U/C.
 - **7.** Start 2 20mm x 70mm bolts (PN: 16-1876) with a 3/4" flat washer (PN: 57-20747) on each bolt through the top inside holes of the U/C into the front holes of the tractor. See attached diagram for any clarification.
 - 8. Start 4 20mm x 90mm bolts (PN: 16-1510) with a 3/4" flat washer (PN: 57-20747) on each bolt through the remaining holes of the U/C into the front holes of the tractor. See attached diagram for any clarification.
 - **9.** Attach each side rail to the tractor frame with 4 7/8" x 5" bolts (PN: 16-20548), 8 7/8" flat washers (PN: 57-20818), and 4 7/8" nuts (PN: 70-20598).
- **10.** Once all bolts are installed, torque the front 20mm bolts to 432 ft-lbs., all 7/8" bolts to 600 ft-lbs., and all 1" bolts to 903 ft-lbs.
- **11.** Set drawbar adjustment to middle hole. Install push pole as shown on the attached diagram.
- **12.** Shim rear of push pole until it is tight against the drawbar.
- **13.** Start tractor and turn front tires from side to side, watching for interference between axle, tires and U/C. Adjust stops on tractor if necessary.
- 14. After first 8 hours of use, re-torque all bolts.
- **15.** Check all fasteners regularly to ensure proper operation of equipment.

