

# 220 and 221 Owner's Manual & Parts Book

Purchase Date
Serial Number
Model Number
Tractor Model
Dealer

PN: 63-11614 Date 6-29-2012

# Contents

Description	Page
To The Owner & Maintenance	2
Safety Precautions & Torque Specifications	3
Skid Shoe and Tilt Plate Adjustment	
2-Way Blade Assemblies	5
6-Way Blade Assemblies	5
6-Way Angle Assembly	
4-Way Blade Assemblies	7
4-Way Angle Assembly	8
2200 and 2210 Angle and Tilt System Hose Routing	
Solid Lower Arm Lift System	10
FH-400 Kneeler	
FH-400 Hydraulic Components & Auxiliary Components	11
Contact Us, Improvements, & Warranty	12

# To The Owner

This manual contains information concerning the operation, adjustment, and maintenance of the 220 blade assembly. You have purchased dependable, long lasting equipment, but only by proper care and operation can you expect to receive the performance and long service built into our products. Please have all operators read this manual carefully and keep the manual available for ready reference. If you have any questions or concerns, contact Grouser Products.

## Maintenance

# Due to the harsh environment many of our equipment operates in, the following tasks should be performed every 10 hours or less.

- Inspect all equipment before operation for existing or potential damages.
- Lubricate all joints with high quality grease.
- Inspect and tighten all bolts to torque specifications on page 3.
- Check replaceable cutting edge for wear ensuring there is enough material to prevent permanent damage to the blade.
- Make sure all non-rotating pins are secured properly.
- Check hydraulic cylinders and hoses for damage or leaks. For replacement parts, see pages 9 & 12.
- Check skid shoes for wear and replace if necessary. For adjustment, see page 4.
- Inspect all tilt-ways for aggressive wear. See page 4 for tilt plate adjustment.

# Safety Precautions

A careful operator is the best operator. Most accidents can be avoided by observing certain precautions. To help prevent accidents, read and take the following precautions before operating this equipment. In addition to these precautions, please follow all safety and operational instructions of your tractor manufacturer.

#### The Dozer:

- 1. The 200 Series Dozer should be operated only by those who are responsible and instructed to do so.
- 2. Read the owner's manual carefully before using this equipment. Lack of operating knowledge can lead to accidents.
- 3. Keep the dozer maintained in reliable and satisfactory condition to ensure your safety.
- 4. Make sure the area is clear of people before moving any equipment.
- 5. Do not modify or permit anyone else to modify or alter the equipment and its components without first consulting Grouser Products or a Grouser dealer.

## Servicing the Dozer:

- 1. Read and follow all safety instructions provided by the tractor manufacturer.
- 2. Always use proper personal safety gear when performing maintenance on equipment.
- 3. Before servicing, relieve hydraulic pressure, stop engine and fully engage parking brake.
- 4. Escaping hydraulic fluid under pressure can penetrate skin causing serious injury. If fluid is injected into skin, obtain medical attention immediately.
  - DO NOT use your hand to check for leaks. Use a piece of cardboard or paper to search for leaks.
  - Stop the engine and relieve pressure before connecting or disconnecting lines.
  - Tighten all connections before starting the engine or pressurizing lines.

## Storing the Dozer:

- 1. Thoroughly clean the dozer before storage. Use paint where necessary to prevent rust.
- 2. Check the dozer for worn or damaged parts. Install new parts as required.
- 3. Lubricate all pins and joints.

# **Torque Specifications**

All bolts should be tightened to specifications set by the manufacturer or previously stated amounts. If neither of these can be found the following torque chart should be used.

	Torque (ft-lbs)			
	SAE G	rade 5	SAE G	rade 8
Size	UNC	UNF	UNC	UNF
5/16	17	19	24	27
3/8	30	35	45	50
7/16	50	55	70	80
1/2	75	85	110	120
9/16	110	120	150	170
5/8	150	170	210	240
3/4	260	300	380	420
7/8	430	470	600	670
1	640	720	910	1020

	Torque (ft-lbs)		
Size	Grade 8.8	Grade 10.9	
M18 x 2.50	202	284	
M20 x 2.50	286	401	
M22 x 2.50	388	547	
M24 x 3.00	493	694	

# Skid Shoe and Tilt Plate Adjustment

## Skid Shoe Adjustment:


- Raise and secure blade to access skid shoe bolts and nuts.
- Loosen nuts and set skid shoe depth by sliding the shoe up and down in direction 'A' shown in Figure 1.
- 3. Once the depth is set, tighten bolts to 150 ft-lbs.
- 4. When skid shoes are worn down, replace with new skid shoes.


## **Tilt Plate Adjustment:**

1. Remove bolts and tilt plates.

Note: Don't remove all of the bolts at the same time.

- 2. Add or remove washers as needed to adjust tiltway clearance to have 1/16" - 1/8" of clearance in direction 'B' shown in Figure 1.
- 3. Once the tilt-way clearance is set, tighten bolts to 640 ft-lbs.

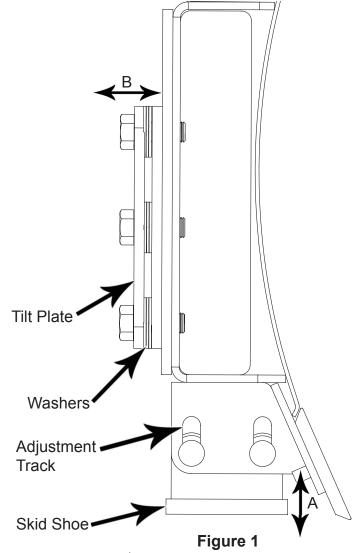


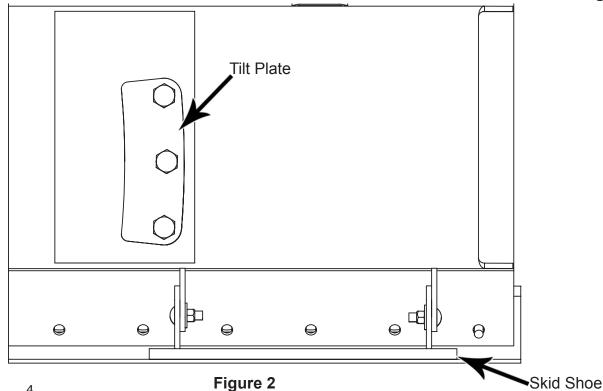

# 2-Way Blade Assemblies

For No Angle and No Tilt (NANT)



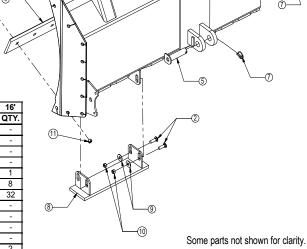

G

#### **GROUSER PRODUCTS INC.**

755 2nd Ave NW West Fargo, ND 58078 WWW.GROUSER.COM

Phone 701.282.7710 Fax 701.282.8131


2-Way Blade Assemblies

Date: 5-22-2012

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF GROUSER PRODUCTS INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT

## 6-Way Blade Assemblies

For Hydraulic Angle and Hydraulic Tilt (HAHT)

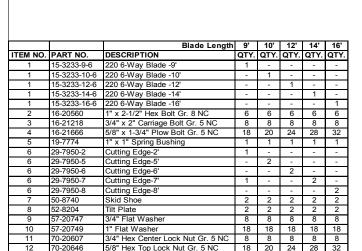


Some parts not shown for clarity.




# GROUSER PRODUCTS INC. 755 2nd Ave NW West Fargo, ND 58078 WWW.GROUSER.COM Phone 701.282.7710 Fax 701.282.8131

6-Way Blade Assemblies

Date: 5-22-2012

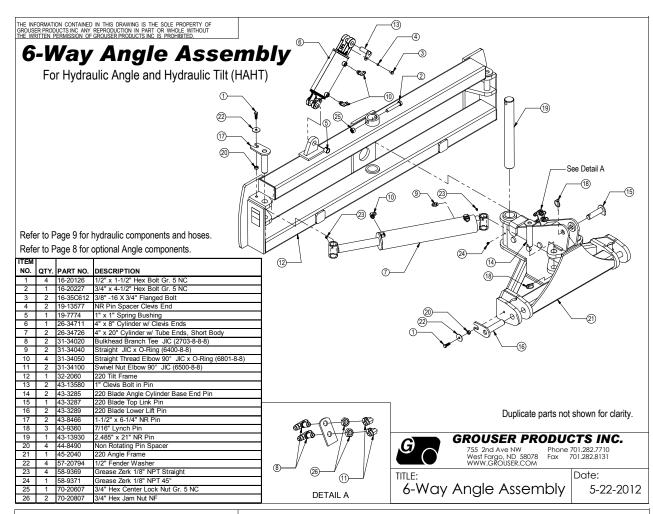

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF GROUSER PRODUCTS INC ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF GROUSER PRODUCTS INC. IS PROHIBITED.

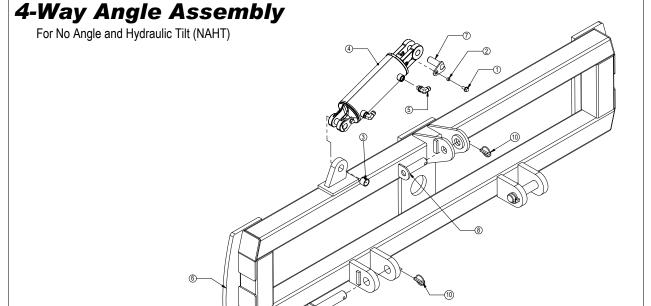

Refer to Page 9 for hydraulic components and hoses. Refer to Page 8 for optional Angle components.

NO.	QTY.	PART NO.	DESCRIPTION
1	2	16-35C612	3/8" -16 X 3/4" Flanged Bolt
2	2	19-13577	NR Pin Spacer Clevis End
3	1	19-7774	1" x 1" Spring Bushing
4	1	26-34711	4" x 8" Cylinder w/ Clevis Ends
5	2	31-34050	Straight Thread Elbow 90° JIC x O-Ring (6801-8-8)
6	1	32-3621	220 NAHT Tilt Frame
7	2	43-13580	1" Clevis Bolt in Pin
8	1	43-3287	220 Blade Top Link Pin
9	2	43-9337	FH-400 Lower Arm Attachment Pin
10	3	43-9360	7/16" Lynch Pin


 $\mathbf{G}$ 


GROUSER PRODUCTS INC.


755 2nd Ave NW Phone 701.282.7710 West Fargo, ND 58078 Fax 701.282.8131 WWW.GROUSER.COM


4-Way No Angle Assembly


Date: 6-7-2012

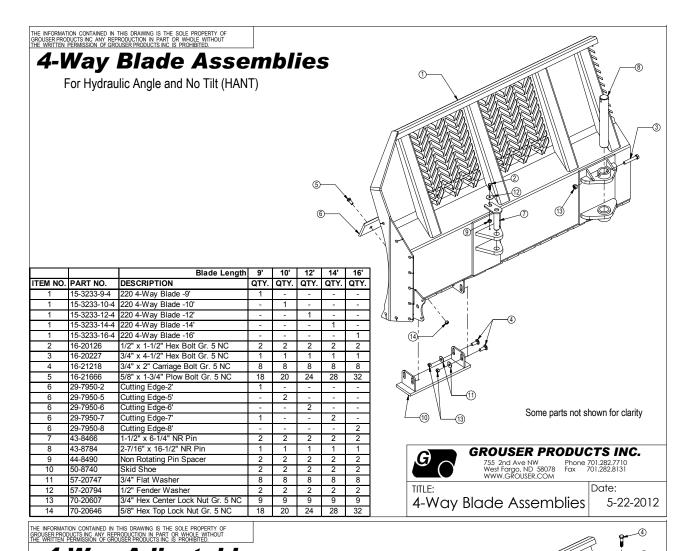


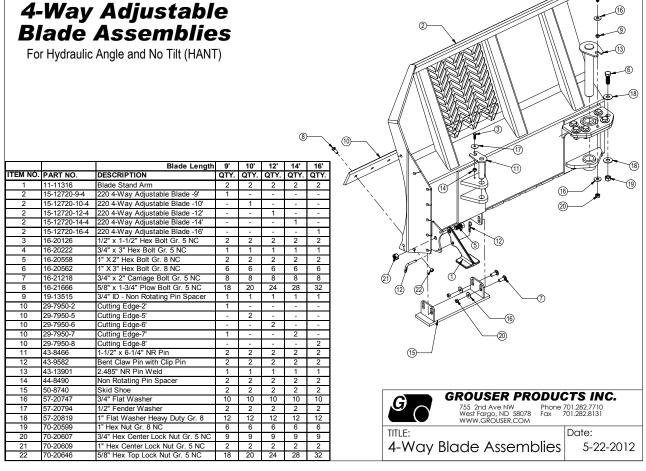

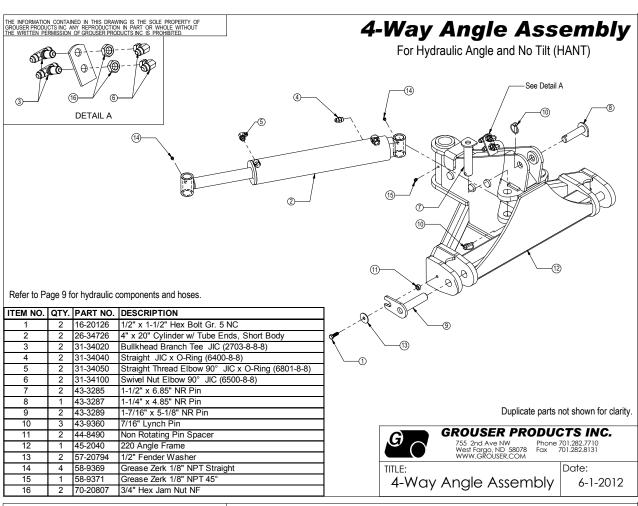

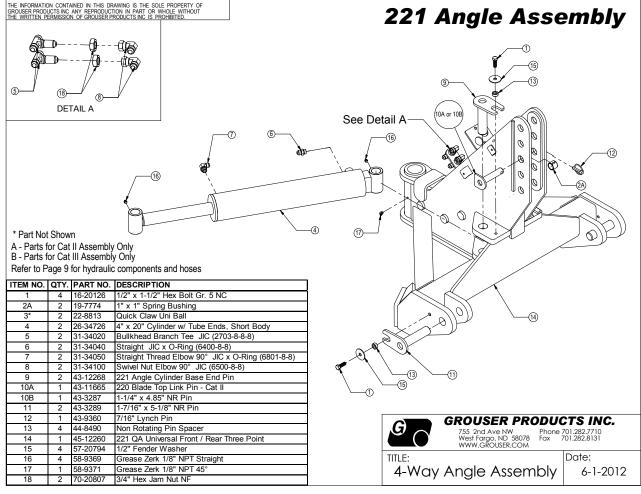

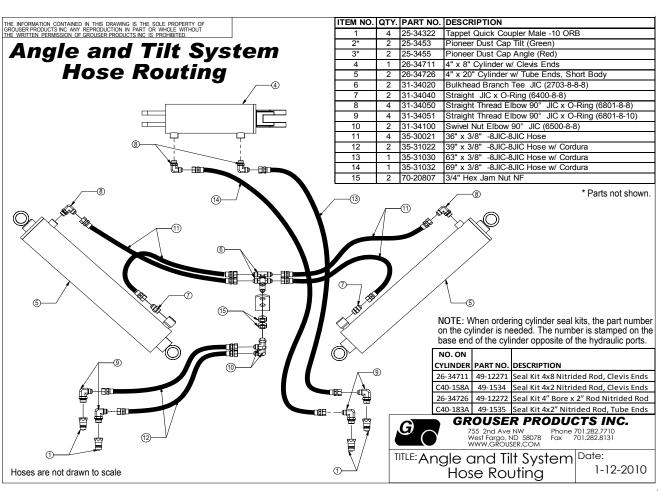

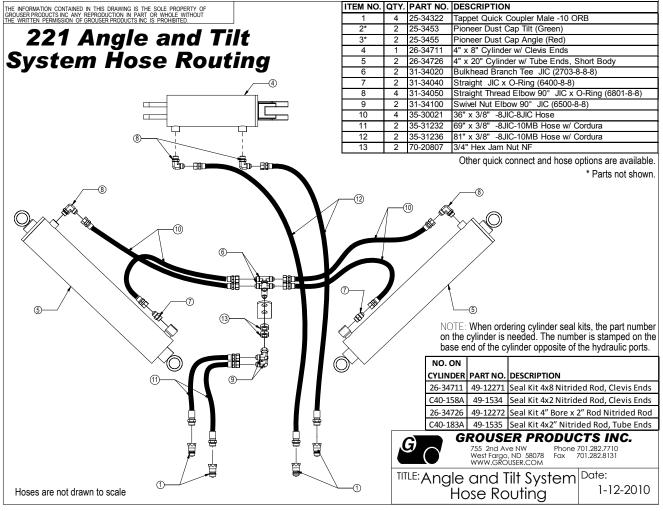

#### ITEM NO. QTY. PART NO. DESCRIPTION 11-1455 FH-400 Top Arm Hook FH-400 Pitch Control Top Arm 11-11135 11-11137 FH-400 Pitch Control Arm Housing 11-11136RH FH-400 Pitch Control Arm Screw Assy Right Hand 11-11136LH FH-400 Pitch Control Arm Screw Assy Left Hand 11-15710 FH-400 Solid Lower Arm - V2 5 1/2" x 1-1/2" Hex Bolt Gr. 5 NC 16-20126 6 1/2" x 2-1/2" Hex Bolt Gr. 5 NC 16-20130 8 2 16-20222 3/4" x 3" Hex Bolt Gr. 5 NC a 16-20227 3/4" x 4-1/2" Hex Bolt Gr. 5 NC 1.5" x 1.25" x 2.00" Spring Bushing (150125200) 10 4 19-3774 11 19-15711 Lower Lift Arm Bushing 12 22-15701 FH-400 Solid Lower Arm Latch 13 26-34728 4" x 12" Cylinder w/ Tube Ends 14 2 43-15712 3/4" x 3-1/4" Safety Hitch Pin and Clip 43-8234 43-8322 15 1-1/4" x 7-1/4" NR Pin 2-7/16" x 25" NR Pin 16 1-1/4" x 10" NR Pin 43-9334 17 FH-400 Top Arm Pin 43-11471 18 19 1 57-20744 1/2" Flat Washer 20 57-20794 1/2" Fender Washer (2.00" x .500" x .125" 21 4 58-9369 Grease Zerk 1/8" NPT Straight 22 3 58-9371 Grease Zerk 1/8" NPT 45° 23 5 70-20604 1/2" Center Lock Hex Nut NC 70-20607 3/4" Hex Center Lock Nut NC

#### Refer to Page 5 for hydraulic components and hoses.

For Serial Numbers 200500313 and higher, use 11-11135 for the top arm and 11-11137, 11-11136RH, and 11-11136LH for items 2, 3, and 4, respectively.

For Serial Numbers earlier than 200500313, use 11-2014 for the top arm and 11-3711, 11-1890, and 11-1891 for items 2, 3, and 4, respectively.


For Serial Numbers 10202291 and higher, use 11-15710 for the lower arm and 16-20222, 19-15711, 22-15701, 43-15712, & 70-20607 for the latch assy.

For Serial Numbers earlier than 10202291, use 11-13230 for the lower arm and 43-3708 & 43-9582 for locking the claw.

Note: If Item #10 is not present, use PN: 43-9335 (1-1/4" x 6" NR Pin) and

PN: 43-9360 (7/16" Lynch Pin) in place of Item #6, #18, and #20.

## **Solid Lower Arm** Lift System

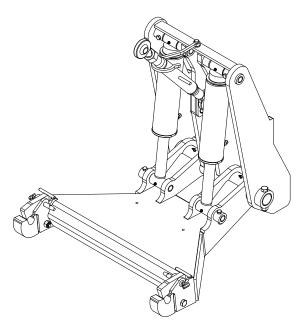



#### GROUSER PRODUCTS INC.

755 2nd Ave NW Phone 701.282.7710 West Fargo, ND 58078 Fax 701.282.8131 WWW.GROUSER.COM

TITLE: Solid Lower Arm Lift System

TITLE: Solid Lower Arm


Lift System

Date: 6-29-2012

Date:

6-29-2012

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF GROUSER PRODUCTS INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF GROUSER PRODUCTS INC IS PROHIBITED. **Solid Lower Arm** Lift System 21) Duplicate parts not shown for clarity. (13) (21) (5) 7 (22) (20) (24) GROUSER PRODUCTS INC. 755 2nd Ave NW West Fargo, ND 58078 WWW.GROUSER.COM Phone 701.282.7710 Fax 701.282.8131

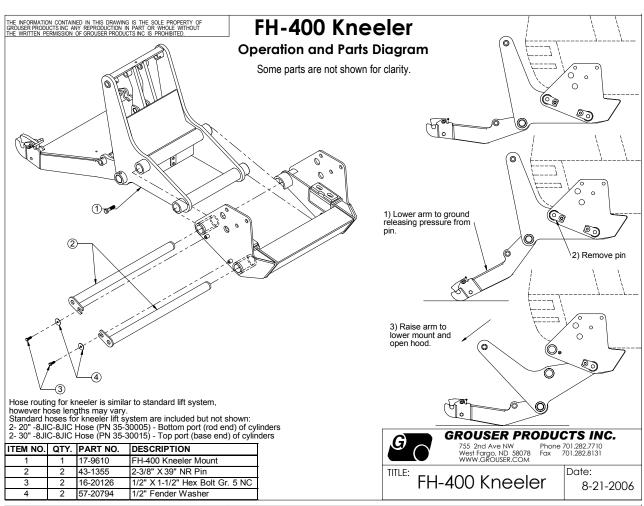

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF GROUSER PRODUCTS INC ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF GROUSER PRODUCTS INC IS PROHIBITED.

Auxiliary Hydraulic Components

Hoses not drawn to scale


\*Part not shown.

NOTE: When ordering cylinder seal kits, the part number on the cylinder is needed. The number is stamped on the base end of the cylinder opposite of the hydraulic ports.

Hose lengths vary per tractor model. Please contact Grouser if hose length is needed for Item 14, 15, 16, 17, 18, or 19.

ITEM NO.	QTY.	PART NO.	DESCRIPTION
1	2	16-20124	1/2" x 1" Hex Bolt Gr 5 NC
2	1	18-8973	Coupler Mounting Bracket
3	2	25-34321	Tappet Quick Coupler Female
4	4	25-34322	Tappet Quick Coupler Male
5*	2	25-3455	Pioneer Dust Cap Angle (Red)
6*	2	25-3456	Pioneer Dust Plug Angle (Red)
7*	2	25-3457	Pioneer Dust Cap Lift (Orange)
8	2	26-34728	4" X 12" Cylinder w/ Tube Ends
9	2	31-34040	8MB-8MJ Straight (6400-8-8)
10	2	31-34050	8MB-8MJ 90° (6400-8-8)
11	4	31-34051	10MB-8MJ 90° (6801-8-10)
12A	2	31-34030	8MJ-8BH-8MJ BH Run Tee
12A	2	31-34020	8MJ-8MJ-8MJ BH Tee (2703-8-8-8)
13	2	70-20807	3/4" Hex Jam Nut NF

## FH-400 Hydraulic Components

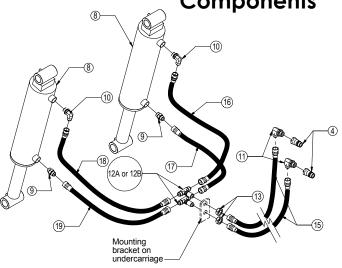

Note 1: If tee mounting bracket is towards left side of frame, use parts labeled with 'A'. For center mounted bracket, use parts labeled with 'B'.

	No. on			
	Cylinder	Part No.	Description	
	26-34728	49-12272	Seal Kit 4" Bore x 2" Rod Nitrided Rod	
	C40-182A10	49-1535	Seal Kit 4x2" (SKC40-162A)	
_	- CPOUSED DECOURTS INC			



755 2nd Ave NW Phone 701.282.7710 West Fargo, ND 58078 Fax 701.282.8131 WWW.GROUSER.COM

TITLE: FH-400 Hydraulic Components

8-21-2006

# **Contact Us**

As always, if you have any questions about your 200 Series Dozer or other products made by Grouser, feel free to contact us.

#### **Grouser Products**

755 2nd Ave NW - West Fargo, ND 58078

Phone: 1-800-747-6182

Fax: 1-701-282-8131

**E-mail:** grouser@grouser.com **Website:** www.grouser.com

# **Improvements**

Grouser Products Inc. is continually striving to improve its products. We reserve the right to change prices, specification, or equipment at any time without notice. We also reserve the right to make improvements or changes when it becomes practical and possible to do so without incurring any obligation to make changes or additions to the equipment sold previously.

# Warranty

Grouser Products warrants to the original purchaser of each item that the product be free from defects in material and workmanship under normal use and service for a period of one year. If such equipment is found to be defective within one year, it is the obligation of Grouser Products under this warranty to repair or replace (exclusive of the cost of labor and transportation), any equipment or parts, in the judgment of Grouser Products to be defective in material or workmanship.

All equipment or parts claimed to be defective in material or workmanship must be made available for inspection at the place of business of a dealer authorized to handle the equipment covered by this warranty, or, upon request by Grouser Products, shipped to the Grouser Products factory in West Fargo, North Dakota. Grouser Products shall have no obligation to bear the cost of labor or transportation in connection with replacement or repair of any such defective parts in the setup process.

This warranty covers only defects in material and workmanship. It does not cover depreciation or damage caused by normal wear, accident, improper assembly, improper adjustments, improper maintenance including lack of proper lubrication, or improper use. Therefore, Grouser Products liability under this warranty shall not be effective or actionable unless the equipment is assembled, maintained and operated in accordance with the operating instructions accompanying the equipment. Grouser Products shall have no liability if the equipment has been altered or reworked without the written authorization of Grouser Products.

Grouser Products' parts, which are furnished under this warranty and properly installed, shall be warranted to the same extent as the original parts under this warranty if, and only if, such parts are found to be defective within the original warranty period covering the original equipment.

