

FH-443 XR Front Hitch Owner's Manual & Parts Book

Grouser Products

755 2nd Ave NW - West Fargo, ND 58078

Phone: 1-701-282-7710 **Fax:** 1-701-282-8131

E-mail: grouser@grouser.com **Website:** www.grouser.com

Serial Number

Model Number

Tractor Model

Dealer

PN: 43897 Serial Number: 10207474-Current Date 4-6-2023

Purchase Date

| Description | Page |
|--|------|
| Welcome To The Owner | 2 |
| Safety Precautions & Torque Specifications | 3 |
| Decals | 4 |
| Maintenance & Lubrication | 5 |
| Lift System | 6-7 |
| Tractor Side Hydraulics | 8-9 |
| Quick Attach System | 10 |
| Hydraulic Schematic | 11 |
| Contact Us, Improvements, & Warranty | 12 |

Thank you for your recent purchase of a Grouser FH-443 Front Hitch. Welcome to the family of satisfied Grouser Front Hitch owners. Grouser Products is committed to offering quality products to help professionals in their daily jobs. We are also committed to providing you the highest level of customer satisfaction possible. Again, thank you for your patronage. We look forward to serving you.

This manual contains information concerning the operation, adjustment, safety and maintenance of the FH-443 Front Hitch. You have purchased a dependable, long lasting piece of equipment. You can expect to receive long lasting performance and long service built into our products with proper care and operation. Please have all operators read and understand this manual carefully. Keep the manual available for reference. If, for any reason, you have questions or comments, we would be happy to hear from you. Call our phone number, 701-282-7710, or send us an e-mail at info@grouser.com. You can expect us to respond to your e-mail in a timely manner.

Torque Specifications

A careful operator is the best operator. Most accidents can be avoided by observing certain precautions. To help prevent accidents, read and take the following precautions before operating this equipment. In addition, please follow all safety and operational instructions of your tractor manufacturer.

The FH-443 Front Hitch:

- 1. The FH-443 Front Hitch should be operated only by those who are responsible and instructed to do so.
- 2. Read the owner's manual carefully before using this equipment. Lack of operating knowledge can lead to accidents.
- 3. Keep the Front Hitch maintained in reliable and satisfactory condition to ensure your safety.
- 4. Make sure the area is clear of people before moving any equipment.
- 5. Do not modify or permit anyone else to modify or alter the equipment and its components without first consulting Grouser Products.
- 6. Lower the blade to the ground when not in use.

Servicing the FH-443 Front Hitch:

- 1. Read and follow all safety instructions provided by the tractor manufacturer.
- 2. Always use proper personal safety gear when performing maintenance on equipment.
- 3. Before servicing, relieve hydraulic pressure, stop engine and fully engage parking brake.
- 4. Escaping hydraulic fluid under pressure can penetrate skin causing serious injury. If fluid is injected into skin, obtain medical attention immediately.
 - DO NOT use your hand to check for leaks. Use a piece of cardboard or paper to search for leaks.
 - Stop the engine and relieve pressure before connecting or disconnecting lines.
 - Tighten all connections before starting the engine or pressurizing lines.


Storing the FH-443 Front Hitch:

- 1. Thoroughly clean the inside and outside of the Front Hitch before storage. Use paint where necessary to prevent rust.
- 2. Check the Front Hitch for worn or damaged parts. Install new parts as required.
- 3. Lubricate all pins and joints.

Tighten all bolts to the values listed below unless otherwise noted. Refer to the parts lists for proper length and grade of the bolts.

| | Torque - Dry (ft-lbs) | | | | |
|------|-----------------------|--------|-------|--------|--|
| | SAE G | rade 5 | SAE G | rade 8 | |
| Size | UNC | UNF | UNC | UNF | |
| 5/16 | 17 | 19 | 24 | 27 | |
| 3/8 | 30 | 35 | 45 | 50 | |
| 7/16 | 50 | 55 | 70 | 80 | |
| 1/2 | 75 | 85 | 110 | 120 | |
| 9/16 | 110 | 120 | 150 | 170 | |
| 5/8 | 150 | 170 | 210 | 240 | |
| 3/4 | 260 | 300 | 380 | 420 | |
| 7/8 | 430 | 470 | 600 | 670 | |
| 1 | 640 | 720 | 910 | 1020 | |


| | Torque - Dry (ft-lbs) |
|------------|-----------------------|
| Size | Grade 10.9 |
| M18 x 2.50 | 284 |
| M20 x 2.50 | 401 |
| M22 x 2.50 | 547 |
| M24 x 3.00 | 694 |

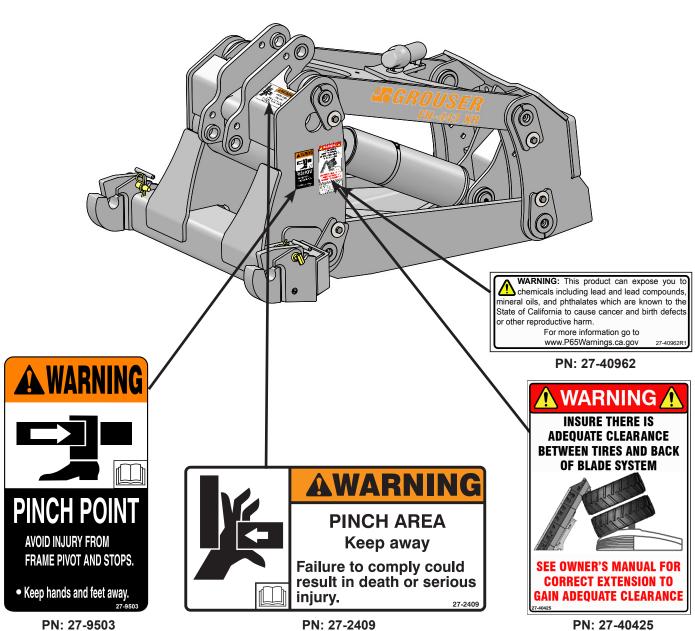


PN: 27-9503 Left and Right Side

Due to the harsh environment this equipment operates in, the following tasks should be performed every 10 hours or less.


- Inspect all equipment before operation for existing or potential damage.
- Lubricate all joints with high quality grease. See below for grease locations.
- Inspect all bolts, and tighten any loose bolts to torque specifications on page 3.
- Check hydraulic cylinders and hoses for damage or leaks. For replacement parts, see hydraulic pages for your specific system.
- Make sure all non-rotating pins are secured properly.
- Inspect all decals and order replacement decals from your dealer if any are damaged or worn.
- · Replace parts with original parts only.

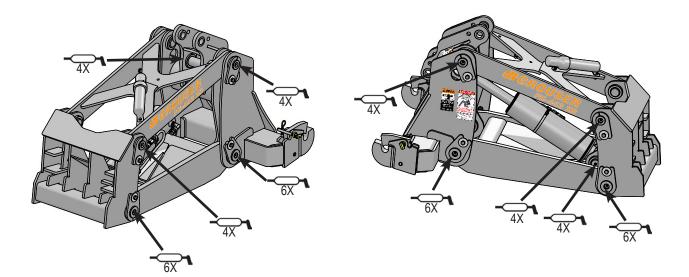

| | Grease Locations |
|-------------|------------------|
| Lift System | 10 |

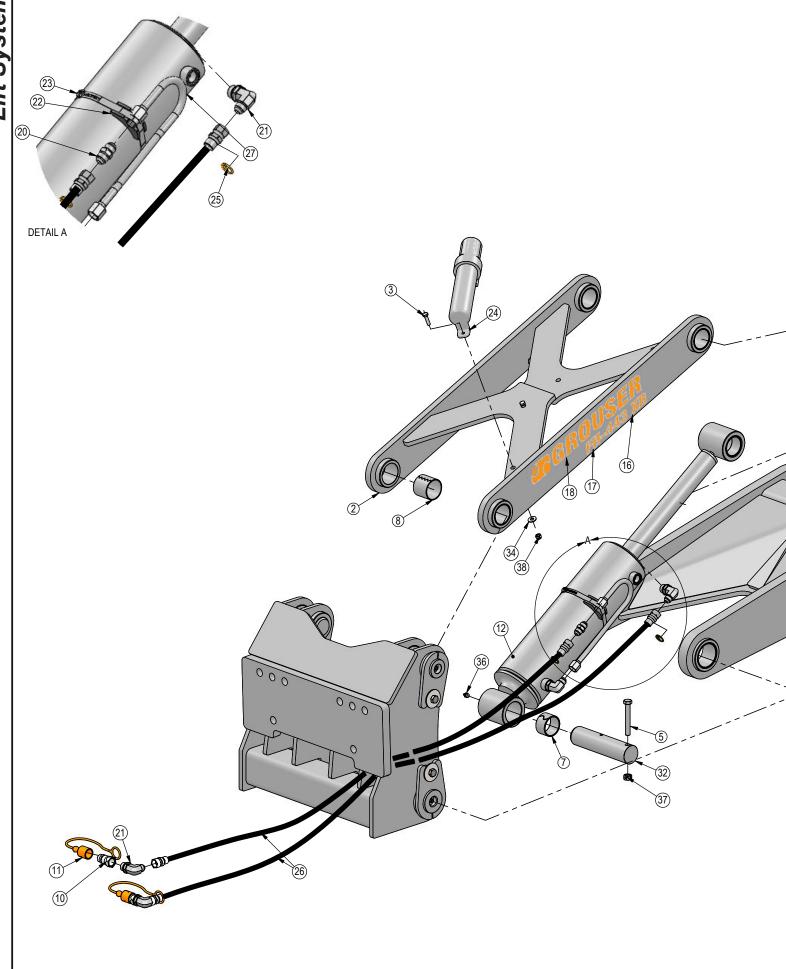


| ITE No | EM Qty O. | . PART NO. | DESCRIPTION | |
|-----------|--------------|------------|------------------------------------|-------------|
| | 1 1 | 11-42535 | XR Lower Arm | |
| 2 | 2 1 | 11-42540 | XR Top Arm | |
| 3 | 3 2 | 16-20035 | 5/16" X 1-1/4" Hex Bolt Gr 5 NC CZ | |
| 4 | 4 8 | 16-20125 | 1/2" X 1-1/4" Hex Bolt Gr 5 NC CZ | |
| 5 | 5 2 | 16-20424 | 1/2" X 3-1/2" Hex Bolt Gr 8 NC YZ | |
| 6 | 6 4 | 19-16328 | 2.75 x 2.50 x 2.00 Spring Bushing | |
| 7 | 7 4 | 19-40419 | 2.25 x 2.00 x 1.38 Spring Bushing | |
| 8 | 8 4 | 19-7954 | 2.25 x 2.00 x 2.00 Spring Bushing | |
| 9 | 9 2 | 22-15701 | Latch Weld | |
| 11 | 0 2 | 25-34342 | Tappet Quick Coupler Male | |
| 1 | 1 2 | 25-3457 | Pioneer Dust Cap Lift (Orange) | |
| 1: | 2 1 | 26 -34761 | 5 x 14 - Cylinder 2" ID Tube Ends | |
| 1: | 3 1 | 27-2409 | Pinch Decal (Hand) | |
| 14 | 4 1 | 27-40425 | Warning Decal - Torque Arm | |
| 1: | 5 1 | 27-40962 | Warning Prop 65 Decal | |
| 10 | 6 2 | 27-42452 | XR Decal | |
| 1 | 7 2 | 27-43877 | FH-440 Decal | |
| 1/2 | 8 1 | 27-9503 | Pinch Decal (Foot) | $\neg \neg$ |
| 1: | 9 2 | 27-9504 | Grouser Horizontal Decal | |

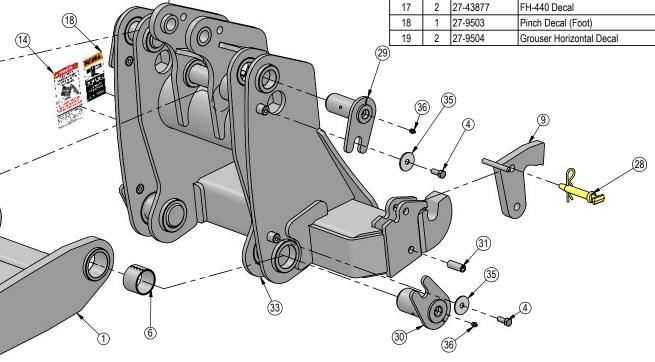


| ITEM NO. | Qty. | PART NO. | DESCRIPTION |
|-------------|------|---|--|
| 20 | 1 | 31-11699-8-8 | JIC Union |
| 21 | 4 | 31-34051 | Straight Thread Elbow 90° JIC x O-Ring |
| 22 | 1 | 34-12932 Cylinder Saddle | |
| 23 | 1 | 34-12933 | Hose Clamp (worm drive - 5.0) |
| 24 | 1 | 34-14961 | Manual Canister Small |
| 25 | 4 | 34-18888-OR | -12 Orange - Spiral Band |
| 26 | 2 | 35-17721-280-1 | 280" x 1/2" -8JIC/-8JIC Hose |
| 27 | 1 | 35-40780 | Tube Assembly |
| 28 | 2 | 43-15712 | 3/4" x 3-1/4" Pin with Hitch Pin Clip |
| 29 | 4 | 43-16385 Top Pin Assy. | |
| 30 | 4 | 43-16390 | Bottom Pin |
| 31 | 2 | 43-17905 | 3/4" x 1/2" x 2.00" Spring Pin |
| 32 | 2 | 43-18405 | Cylinder Pin |
| 33 | 1 | 45-42700 | FH 440 Lift - 3pt |
| 34 | 2 | 57-20741 | 1/4" Flat Washer CZ |
| 35 | 8 | 57-20794 | 1/2" Fender Washer (2.00" OD x .500" ID x .125") |
| 36 | 6 | 58-9369 | Straight 1/8" NPT Grease Zerk |
| 37 | 2 | 70-20604 | 1/2" Hex Center Lock Nut Gr 5 NC CZ |
| 38 | 2 | 70-20611 5/16" Nyloc Hex Nut Gr 5 NC CZ | |

Note: When ordering cylinder seal kits, the part number on the $\,$ cylinder is needed. The number is stamped on the base end of the $% \left(1\right) =\left(1\right) \left(1\right) \left($ cylinder opposite of the hydraulic ports.


No. On Cylinder 26-34761 **Description**Seal Kit 5 x 14 - Nitrided Rod Part No. 49-12277

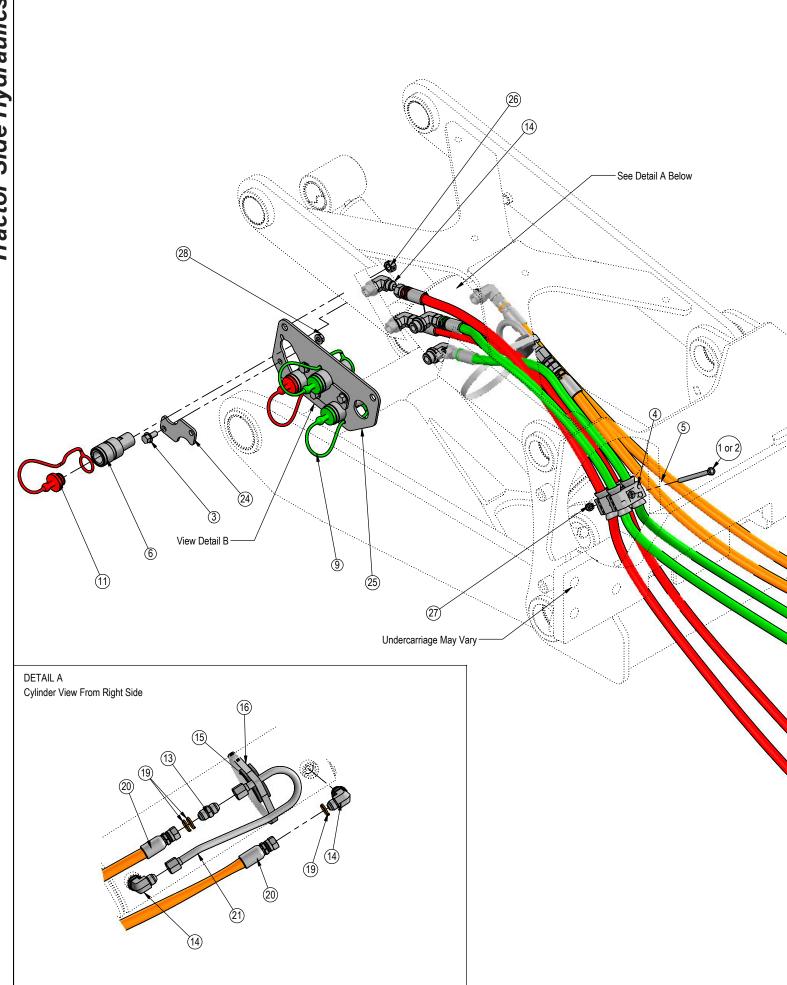

| TEM No. | PART NO. | HAHT & LIFT Qty. | HANT & LIFT QTY. | NANT & LIFT QTY. | DESCRIPTION |
|------------|-------------------|---------------------|---------------------|---------------------|---|
| 1 | 16-20046 | 1 | - | - | 5/16" X 4" Hex Bolt Gr 5 NC CZ |
| 2 | 16-20040 | - | 1 | - | 5/16" X 2-1/2" Hex Bolt Gr 5 NC CZ |
| 3 | 16-35C612 | 4 | 2 | - | 3/8" x 3/4" Flange Bolt |
| 4 | 18-19311-03-P-087 | 2 | 1 | - | Hose Clamp |
| 5 | 18-19312-03 | 1 | 1 | - | Twin Cover Plate |
| 6 | 25-34321 | 4 | 2 | - | Female Pioneer Coupler |
| 7 | 25-34342 | 6 | 4 | 2 | Tappet Quick Coupler Male - Poppet Style |
| 8 | 25-3453 | 2 | - | - | Pioneer Dust Cap Tilt (Green) |
| 9 | 25-3454 | 2 | - | - | Pioneer Dust Plug Tilt (Green) |
| 10 | 25-3455 | 2 | 2 | - | Pioneer Dust Cap Angle (Red) |
| 11 | 25-3456 | 2 | 2 | - | Pioneer Dust Plug Angle (Red) |
| 12 | 25-3457 | 2 | 2 | 2 | Pioneer Dust Cap Lift (Orange) |
| 13 | 31-11699-8-8 | 1 | 1 | 1 | JIC Union |
| 14 | 31-34051 | 12 | 8 | 4 | Straight Thread Elbow 90° JIC x O-Ring |
| 15 | 34-12932 | 1 | 1 | 1 | Cylinder Saddle |
| 16 | 34-12933 | 1 | 1 | 1 | Hose Clamp (worm drive - 5.0) |
| 17 | 34-18888-RD | 6 | 6 | - | -12 Red - Spiral Band |
| 18 | 34-18888-GR | 6 | - | - | -12 Green - Spiral Band |
| 19 | 34-18888-OR | 6 | 6 | 6 | -12 Orange - Spiral Band |
| 20 | 35-17721-280-1 | 2 | 2 | 2 | 280" (23.3") x 1/2" -8JIC/-8JIC Hose w/Cordura |
| 21 | 35-40780 | 1 | 1 | 1 | Tube Assembly |
| 22 | 35-42459-280-1 | 2 | 2 | - | 280" x 3/8" -8JIC/-8JIC Hose (w/Cordura & 26.5" Colla |
| 23 | 35-42459-280-2 | 2 | - | - | 280" x 3/8" -8JIC/-8JIC Hose (w/Cordura & 23.5" Colla |
| 24 | 44-14734 | 2 | 1 | - | Plate, Retainer |
| 25 | 44-16236 | 1 | 1 | - | Plate, Coupler Mount |
| 26 | 70-20604 | 2 | 2 | - | 1/2" Hex Center Lock Nut Gr 5 NC CZ |
| 27 | 70-20611 | 1 | 1 | - | 5/16" Nyloc Hex Nut Gr 5 NC CZ |
| 28 | 70-20622 | 4 | 2 | - | 3/8" Flange Hex Nut Gr 5 NC CZ |

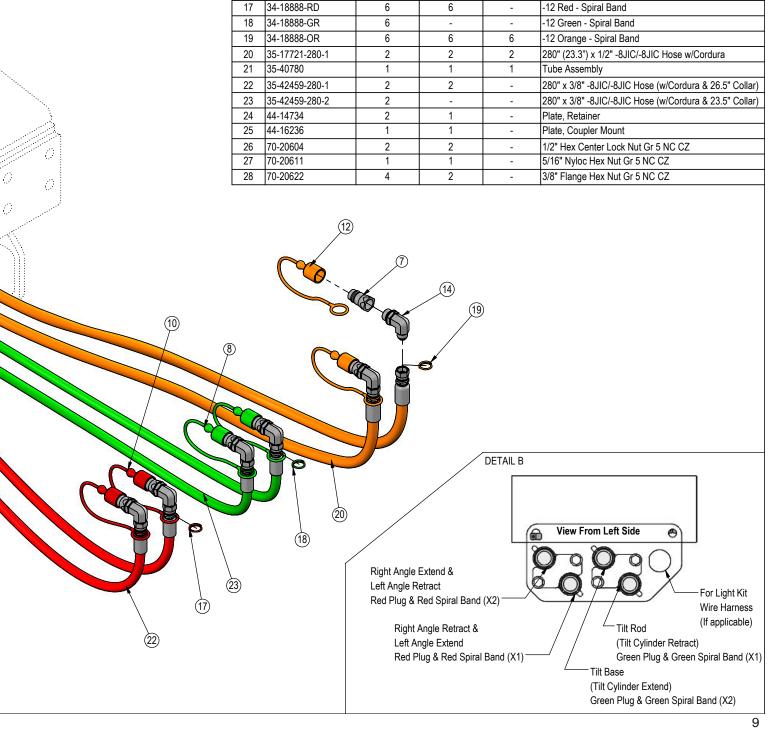



| 42720-A | | | | | | |
|----------|------|----------|----------------------------------|--|--|--|
| ITEM NO. | Qty. | PART NO. | DESCRIPTION | | | |
| 1 | 2 | 16-20218 | 3/4" x 2" Hex Bolt Gr.5 NC | | | |
| 2 | 1 | 18-42720 | Bracket, Quick Hook | | | |
| 3 | 2 | 43-42599 | Pin | | | |
| 4 | 2 | 57-20747 | 3/4" Flat Washer | | | |
| 5 | 2 | 70-20607 | 3/4" Center Lock Hex Nut Gr 2 NC | | | |

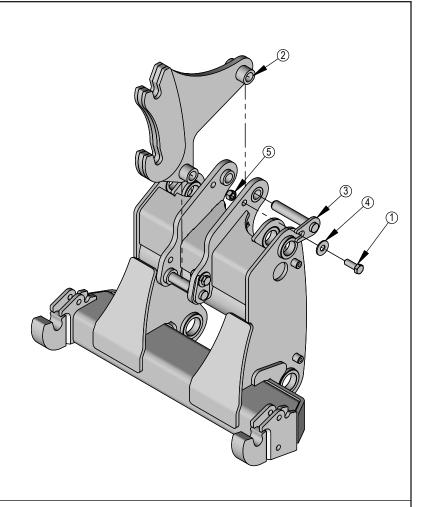

Note: After top link is adjusted, torque bolts to 260 ft-lbs.

| l | | | | | |
|----------|------|----------|----------------------------------|--|--|
| 42710-A | | | | | |
| ITEM NO. | Qty. | PART NO. | DESCRIPTION | | |
| 1 | 1 | 11-42711 | End Weld 1 | | |
| 2 | 1 | 11-42712 | End Weld 2 | | |
| 3 | 1 | 16-20218 | 3/4" x 2" Hex Bolt Gr.5 NC | | |
| 4 | 4 | 16-21220 | 3/4" x 2.50" Carriage Bolt Gr.5 | | |
| 5 | 1 | 43-42599 | Pin | | |
| 6 | 1 | 57-20747 | 3/4" Flat Washer | | |
| 7 | 5 | 70-20607 | 3/4" Center Lock Hex Nut Gr 2 NC | | |

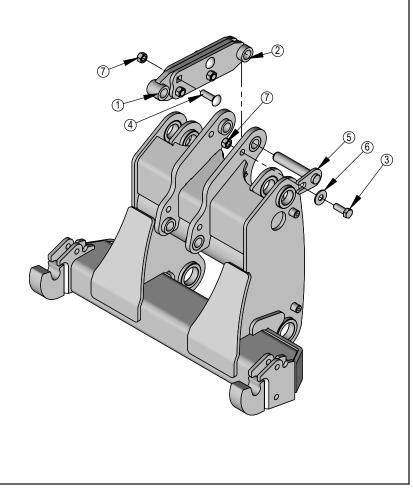

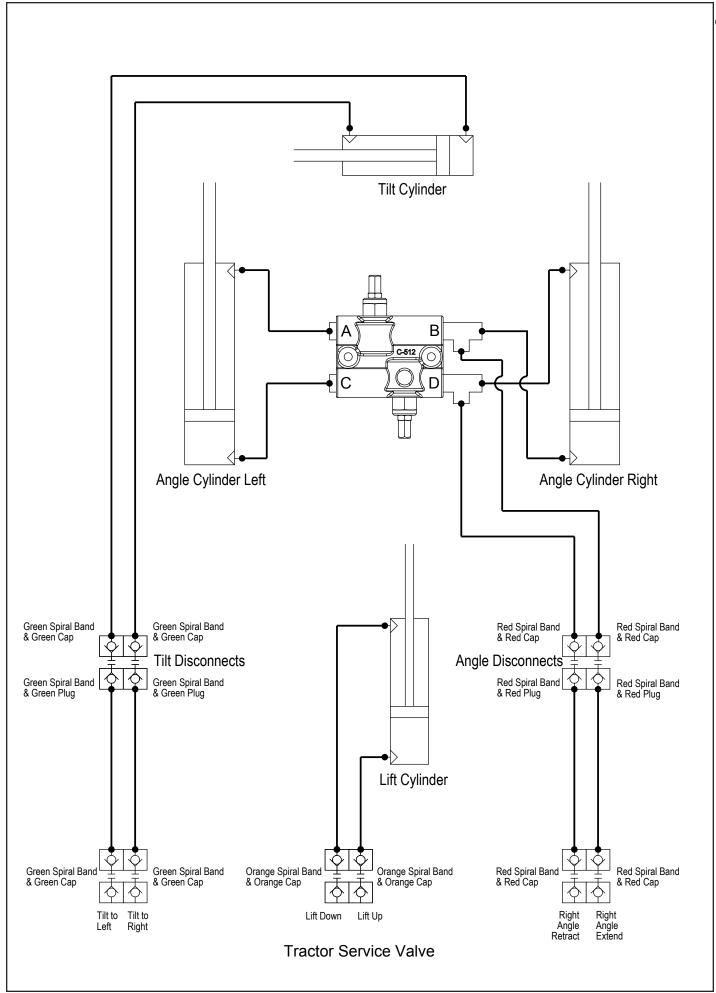

Improvements

Grouser Products Inc. is continually striving to improve its products. We reserve the right to change prices, specification, or equipment at any time without notice. We also reserve the right to make improvements or changes when it becomes practical and possible to do so without incurring any obligation to make changes or additions to the equipment sold previously.

Warranty

Grouser Products warrants to the original purchaser of each item that the product be free from defects in material and workmanship under normal use and service for a period of two (2) years for Agriculture Series Blades and one (1) year for Heavy Duty Series from date of original retail delivery.

The obligation of the consumer under this warranty:

- 1. To read the operators manual and to operate, lubricate, maintain and store equipment in accordance with the instructions listed in the operators manual.
- 2. To inspect equipment and if any part needs repair or replacement when continued use would cause damage or wear to other parts or safety.
- 3. All equipment or parts claimed to be defective in material or workmanship must be made available for inspection at the place of business of a dealer authorized to handle the equipment covered by this warranty, or, upon request by Grouser Products, shipped to the Grouser Products factory in West Fargo, North Dakota.

The obligation of the dealer under this warranty:

- 1. Complete warranty registration form and submit within 30 days of sale.
- 2. Contact Grouser Products for authorization prior to performing any warranty repairs or part replacement.
- 3. Complete warranty request form and submit with photos and supporting documentation.

The obligation of Grouser Products under this warranty:

- Repair or replace, any equipment or parts, in the judgment of Grouser Products to be defective in material or workmanship.
- 2. Grouser Products will cover the cost of parts and ground shipping at dealer invoice only.
- 3. Grouser Products shall have no obligation to bear the cost of labor or transportation in connection with replacement or repair of any such defective parts.

This warranty does not cover:

- 1. Depreciation or damage caused by normal wear, accident, improper assembly, improper adjustments.
- 2. Improper maintenance including lack of proper lubrication, or improper use. Including loose bolts, nuts, or fitting due to over tightening or vibration after 20 hours of operation.
- 3. Repairs or alterations without authorization from a Grouser Products representative.
- 4. Grouser Products shall have no liability if the equipment has been altered or reworked without the written authorization of Grouser Products.

Grouser Products' parts, which are furnished under this warranty and properly installed, shall be warranted to the same extent as the original parts under this warranty if, and only if, such parts are found to be defective within the original warranty period covering the original equipment.

NO EMPLOYEE OR REPRESENTATIVE OF GROUSER PRODUCTS IS AUTHORIZED TO CHANGE THE WARRANTY IN ANY WAY OR GRANT ANY OTHER WARRANTY.

Contact Us

As always, if you have any questions about your system or other products made by Grouser, feel free to contact us.

