


Install 20mm x 2.5 x 70mm
With Thick Washer
6 Places

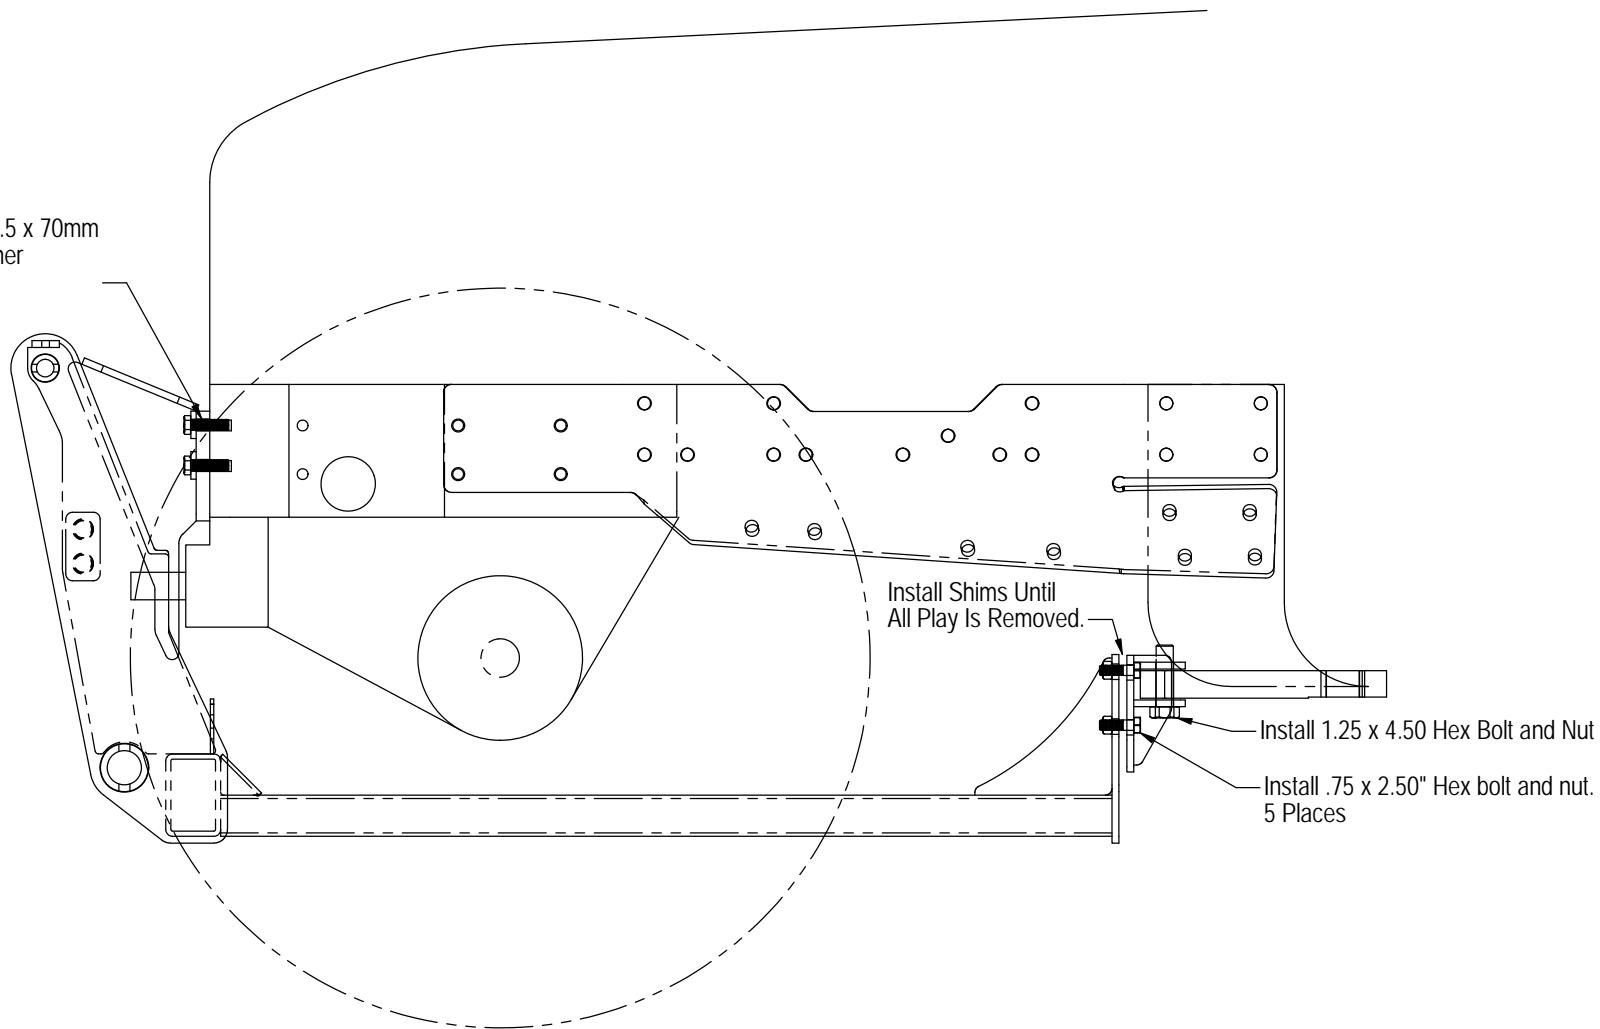

Install Shims Until
All Play Is Removed.

Install 1.25 x 4.50 Hex Bolt and Nut

Install .75 x 2.50" Hex bolt and nut.
5 Places

- 1: Remove drawbar, drawbar mounting brackets and PTO shield from tractor.
- 2: Install drawbar mounting bracket onto tractor drawbar mount with 1.25" bolt and nut.
(Nut must go on top)
- 3: Position undercarriage (UC) under tractor.
- 4: Lift undercarriage and slide it into position.
- 5: Install front and rear bolts.
- 6: Add shims at rear of UC until drawbar-mounting bracket is snug.
- 7: Torque 20mm bolts to 300 ft. lbs. .75" bolts to 250 ft. lbs. 1.25" bolt to 400 ft. lbs.



GROUSER PRODUCTS INC.

755 2nd Ave NW Phone 701.282.7710
West Fargo, ND 58078 Fax 701.282.8131
WWW.GROUSER.COM

TITLE	New Holland TV 145	DWG. NO.	11260-A
Date:	12-10-04	Scale:	1:14
		Sheet:	1